



## **Introduction to KeyCreator Software**

**Kubotek USA  
100 Locke Drive  
Marlborough, MA 01752  
PHONE (508) 229 • 2020  
FAX (508) 229 • 2121  
[www.kubotekusa.com](http://www.kubotekusa.com)**

# Copyright and Trademark Notice

Second Edition

© Copyright 2006 Kubotek Corporation. All Rights Reserved.

This documentation may not be reproduced in any form, for any purpose, unless it complies with the terms presented in the Kubotek Corporation Software License Agreement.

Kubotek Corporation and the program authors have no liability or responsibility to the purchaser or any other person or entity with respect to liability, loss or damage caused, or alleged to be caused either directly or indirectly by this software, including but not limited to, any interruption of service, loss of business or anticipatory profits or consequential damages resulting from the use or operation of this software.

Kubotek and KeyCreator are registered trademarks of Kubotek Corporation. Windows™ is a trademark of Microsoft Corporation. ACIS is a registered trademark of Spatial Technology INC. Pro/ENGINEER is a registered trademark of PTC.

All other products or brand names are registered trademarks or trademarks of their respective holders. Specifications subject to change without notice.

Every effort has been made to ensure that the content of this book accurately reflects KeyCreator version 5.0. Some program dialogs in this book may change in future versions of KeyCreator.

First printing: April 2005

# Contents

<b>Chapter 1 Customizing KeyCreator</b>	<b>11</b>
<b>1.0 Overview</b>	<b>11</b>
<b>1.1 The Default Workspace</b>	<b>12</b>
<b>1.2 Workspace Overview</b>	<b>13</b>
Saving a Custom Workspace:	13
Loading a Custom Workspace during Startup:	13
<b>1.3 View&gt;Control Bars</b>	<b>16</b>
Modeling Palette Menu	16
<b>1.4 Tools&gt;Customize</b>	<b>17</b>
Commands Tab	18
<b>1.5 Using Templates</b>	<b>21</b>
<b>1.6 Assigning Mouse Buttons</b>	<b>22</b>
<b>1.7 Assigning Keyboard Shortcuts</b>	<b>23</b>
<b>Chapter 2 View Functions</b>	<b>25</b>
<b>2.0 Overview</b>	<b>25</b>
<b>2.1 Zoom</b>	<b>26</b>
<b>2.2 Pan</b>	<b>28</b>
<b>2.3 Explorer View Window</b>	<b>28</b>
<b>Chapter 3 File Setup</b>	<b>31</b>
<b>3.0 Overview</b>	<b>31</b>
KeyCreator Default Environment	32
Part-Specific versus Session-Specific Settings	32
<b>3.1 Grid and Snap</b>	<b>33</b>

<b>3.2</b>	<b>Attributes</b>	<b>34</b>
	Setting Attributes	34
	Set Current Attributes Dialog Features	36
	Changing Entity Attributes	37
<b>3.3</b>	<b>Units</b>	<b>38</b>
	New File Units	38
	Displaying Coordinates	39
	Display of Cursor Coordinates	39
<b>3.4</b>	<b>Levels</b>	<b>40</b>
	Adding and Removing Levels	41
	Setting up and Naming Levels	42
	The Active Level	42
	Level List Columns	43
	Moving Geometry to Different Levels	44
<b>3.5</b>	<b>Exercise: Basic Drawing Setup</b>	<b>45</b>
	Overview	45
<b>3.6</b>	<b>User Preferences</b>	<b>49</b>
	Default Options Dialog Box	49
	MDI Session-Specific vs Part-Specific Settings	50
	User Profiles and KeyCreator Preferences	51
	Saving the KeyCreator Workspace	51
	Set Configuration Options	52
	Start Up	53
	Directories	54
	Display	55
	Print/Plot	56

## **Chapter 4 Creating Geometry** **59**

<b>4.0</b>	<b>Overview</b>	<b>59</b>
	What's Covered in This Chapter	60
	Chapter Projects	60
<b>4.1</b>	<b>Deleting and Recalling Entities</b>	<b>61</b>
	Delete Entities	61
	Undo/Redo	62
<b>4.2</b>	<b>Command Workflow</b>	<b>63</b>
	Command Modes	63
	Root Functions	63
	Immediate Mode Functions	64
	Dialog Boxes and the Conversation Bar	65
	Direct Functions	66

	Conversation Prompts	67
	Accept, Backup, and Escape	68
<b>4.3</b>	<b>The Create Functions</b>	<b>69</b>
	Help and Other KeyCreator Resources	69
	Entities and the Geometric Database	70
	Basic Entities	71
	Summary of the Create Functions	72
	Lines	73
	Construction Lines	74
	Arcs and Circles	75
	Points	76
	Polylines	77
	Fillet and Chamfers	78
	Splines	79
	Introduction to Conic Entities	80
	Conic Ellipse	81
	Defining a KeyCreator Ellipse	82
	Rectangle	83
	Polygons	84
<b>4.4</b>	<b>Exercise: Digital Doodle</b>	<b>85</b>
	Overview	85
<b>4.5</b>	<b>Chapter Projects</b>	<b>91</b>
	Overview	91
	Setup “New Part Units” for Floor Plan project	95
<b>4.6</b>	<b>Position Options</b>	<b>97</b>
	The Positional Options	98
	Apparent Intersections	103
	Handling Apparent Intersections	104
<b>4.7</b>	<b>Position Snap</b>	<b>105</b>
	Position Snap	105
	Position Snap Enabled	106
	Position Snap Disabled	106
	Position Snap On-Screen Indicators	107
<b>4.8</b>	<b>Trimming, Extending and Breaking Entities</b>	<b>108</b>
	Menu Organization	109
	The Trim/Extend Functions	110
	The Break Functions	111
	Break Settings	112
	Two Commands in One	113
	“Keep/Cut” Principle	114
	Trim/Extend First	115
	Trim/Extend Both	116
	Trim/Extend Double	117
	Trimming Closed Entities	118

Trim Using Tangent Entities	118
Trim Divide	119
Trim/Extend Modal	120
Trim/Extend Position	121
Quick Trim Setting	122
<b>4.9 Exercise: Constructing and Trimming Geometry</b>	<b>124</b>
Overview	124
<b>4.10 Chapter Projects</b>	<b>133</b>
Overview	133
<b>4.11 Libraries</b>	<b>142</b>
Library Part	143
Creating a Library Part File	144
The Base Position	145
Importing KeyCreator Files	146
Import Options	147
<b>4.12 Exercise: Inserting a Library File</b>	<b>148</b>
Overview	148
When to Import a Border	149
<b>Chapter 5 Editing Geometry</b>	<b>153</b>
<b>5.0 Overview</b>	<b>153</b>
<b>5.1 Selecting Entities</b>	<b>154</b>
The Selection Options	154
Selection Modifiers	155
Selection Setting	156
Reusing Previous Selection Lists	156
Modeless Selection	157
Selection Verification	157
Single Select	157
Modeless Single Select	157
Chain	158
Window	159
Polygon	161
Group	163
Plane	164
All Dsp	165
On-the-Fly Masking	166
<b>5.2 The Transform Functions</b>	<b>167</b>
Introduction	167
Summary of Transforms	168
Transform Options	168

Applying the Transform Options	169
Join Entities	169
COPY Generation	171
COPY and JOIN Settings	172
Delta	173
Old - New	175
2D Translation using Old-New	176
3D Translation using Old-New	177
Rotate	178
Rotation Angle	178
Rotate using two Positions	179
Scale Full	180
Scaling Geometry and Associated Dimensions	181
Scale Axes and Scale Uni-Directional	182
Scale Uni-Directional	183
Mirror	184
Box Move	186
<b>5.3 Exercise: Template</b>	<b>188</b>
Overview	188
<b>5.4 Exercise: Toy Ferris Wheel</b>	<b>203</b>
Overview	203
<b>5.5 Exercise: Scaling Entities</b>	<b>215</b>
Overview	215
<b>5.6 Chapter Projects</b>	<b>218</b>
Overview	218

## **Chapter 6 Verifying Geometry 229**

<b>6.0 Overview</b>	<b>229</b>
<b>6.1 On-Line Calculator</b>	<b>230</b>
Entering Expressions	231
Register Variables used in Data Verification	232
Using Register Variables with the On-Line Calculator	233
User Variables	234
<b>6.2 The Verify Functions</b>	<b>235</b>
Verify Entity	235
Verify Entity Continued	237
How KeyCreator Reports Coordinates	238
World Coordinates	239
CPlane Coordinates	240
Verifying Distance	241
Verifying Angle	243

Reporting Angles	244
Verifying Perimeter	245
Verifying Area and Centroid	246
Approximating Area	247
Interior Loops	248
Moment of Inertia	249
Mass and Inertia	250
Verifying Positions	251

## **Chapter 7 Basic Detailing 253**

### **7.0 Overview 253**

Verifying Measurements and Dimensioning	254
Detailing Standards	255

### **7.1 Detail Settings 256**

Formatting Dimensions and Notes	257
Dimension Representation	258
Setting Dimension Units	259
Setting the Appearance of Dimensions	260
Reporting Tolerances	261
Setting the Upper and Lower Tolerance	262
Saving Dimension Settings	263
Updating Dimensions with New Settings	264
Changing Dimension	264
Attributes	264
A Word on Associativity and Dimensions	265
Dimension Attachment	266
Dimension Associativity	266
Ensuring Associativity	266
Example	266
Re-associating Dimensions	268

### **7.2 Adding Notes to a Drawing 269**

Overview	269
Default Font Styles	270
Windows Fonts	270
Filled Fonts	270
Keying in Note Text	271
Special Symbols	271
Import Notes	272
File Notes (Smart Notes)	272
Extracting KeyCreator Notes to a File	273
Editing Existing Note Text	274

### **7.3 Linear Dimensions 275**

Overview	275
Placing Linear Dimensions	276
View Dependency of Linear Dimensions	277

Examples of Linear Dimensions	278
<b>7.4 Radial and Circular Dimensions</b>	<b>281</b>
Overview	281
Examples of Radial Dimensions	282
Examples of Diameter Dimensions	285
<b>7.5 Angular Dimensions</b>	<b>288</b>
Overview	288
Examples of Angular Dimensions	289
<b>7.6 Ordinate Dimensions</b>	<b>291</b>
Overview	291
Linear versus Ordinate Dimensions	292
Editing Ordinate Dimensions	293
The Base Position and Lead Text	293
Deleting Elements from an Ordinate Dimension	294
Adding New Elements to an Ordinate Dimension	294
Moving Elements in an Ordinate Dimension	295
Adjusting the Position of Ordinate Text	296
Aligned versus Non-Aligned Ordinate Dimensions	297
Example of Horizontal and Vertical Ordinate Dimensions	298
Example of Parallel Ordinate Dimensions	299
Coordinate Dimensions	300
<b>7.7 Cross Hatching</b>	<b>301</b>
Overview	301
Section Views	302
Creating Crosshatching	303
Boundaries	304
Selecting the Hatch Boundary	304
Quick Hatch	304
Hatch Generation	305
Modifying Hatch	305
Recognizing Boundary Intersections	306
Hatch Associativity	307
Adding and Removing Hatch Boundaries	308
Islands	309
<b>7.8 Exercise: Detailing 2D Files</b>	<b>310</b>
Overview	310
<b>Appendix</b>	<b>345</b>
<b>On-Line Calculator Functions</b>	<b>345</b>
Math and Logical Operators	349
Reserved Variables	349
Reserved Variables (continued)	350
<b>Index</b>	<b>351</b>

